


Preliminary tasks are described in Disassembling and assembling cylinder head.

Replace valve stem seals.

Remove valves from cylinder head.

If necessary, check valve guide for wear.

If necessary, remachine valve seat.

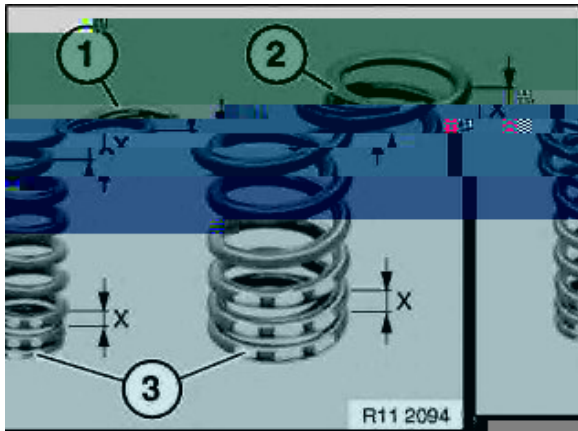

Caution!

In