


Note:

Remove and install panel for instrument panel,
refer to Gr. 51 .

Remove brake light switch, if necessary remove clutch
switch,

refer to Gr. 61 .

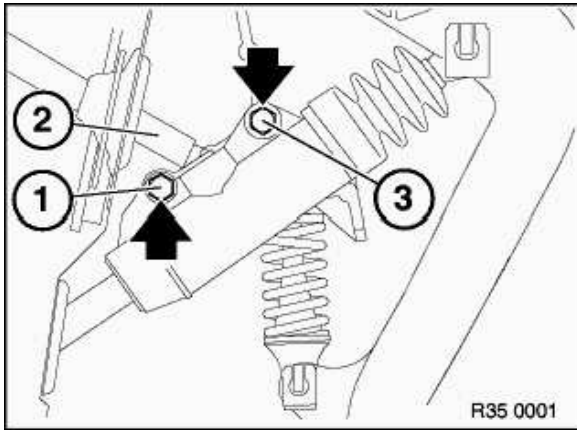


Unscrew and pull out screws (1 and 3). Take off holder for
brake-light and clutch switches.

Place clutch cylinder to one side.

Installation:

Replace self-locking nut of screw (1).

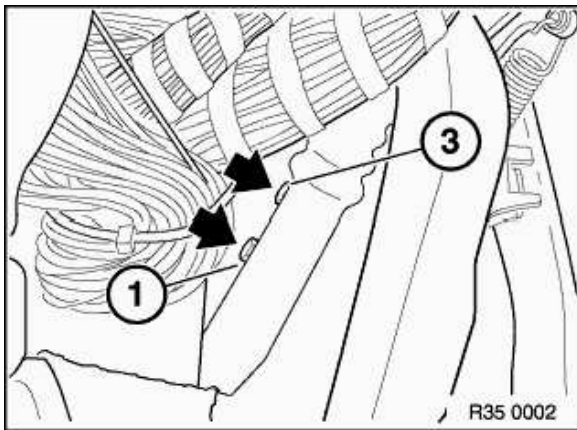


Screw (3) holds retaining plate for clutch and brake-light
switches.

Installation:

Make sure line (2) is laid without kinks.

(1) and (3) = clutch-cylinder screws.

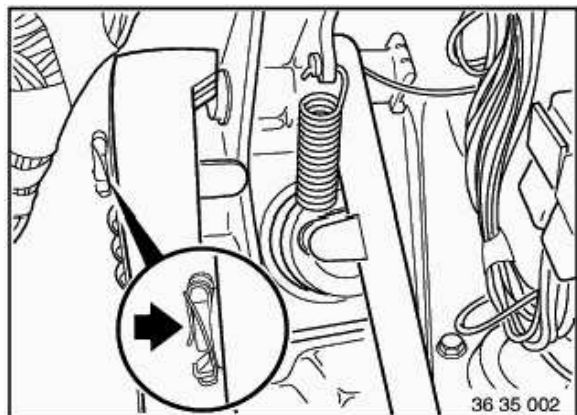

Remove locking clip for shaft pin of clutch cylinder.


Version with return spring for clutch pedal:

Disconnect return spring.

Push out shaft pin.

Installation:

Grease sliding surfaces,
refer to Technical Data.

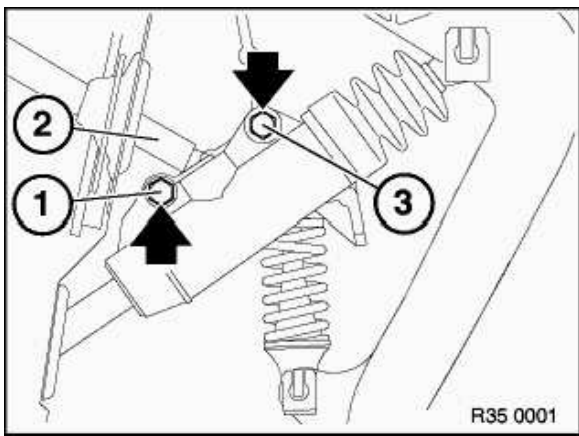

Version with over-center helper spring for clutch pedal:

Hold clutch pedal tightly.

Push out shaft pin.


Pull up clutch pedal slowly.

Take off over-center helper spring.

Installation:


Grease sliding surfaces,
refer to Technical Data.

Make sure spring holder is seated correctly in mounting block.

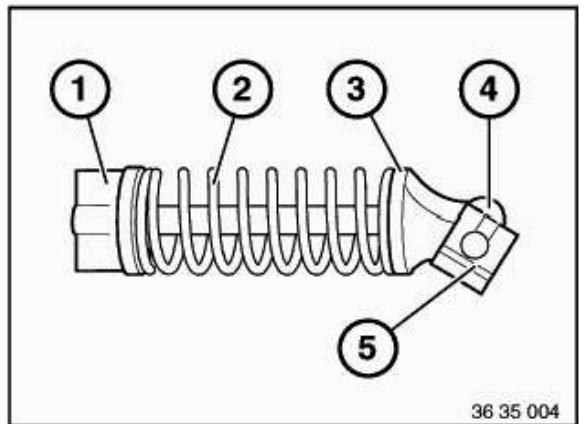


Assembly of over-centre helper spring:

1. Spring retainer
2. Over-center helper spring
3. Guide pin
4. Bearing shaft
5. Locking clip

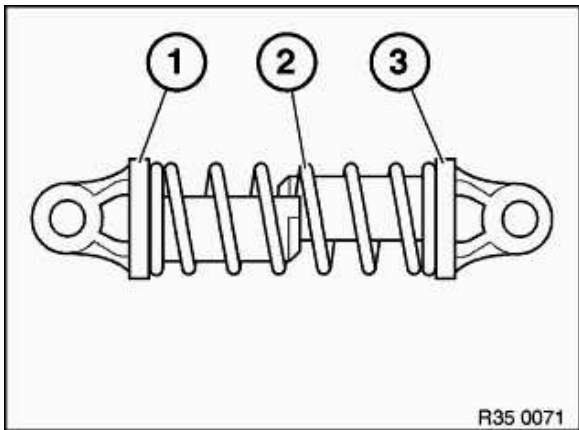

Over-center helper spring from model 3/97:

1. Spring retainer, black
2. Over-center helper spring
3. Spring retainer, gray

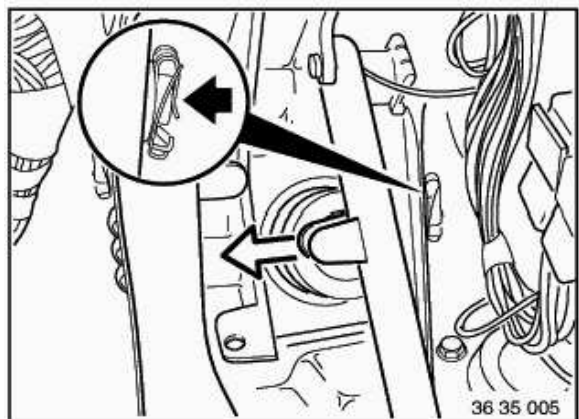


Disconnect return spring for brake pedal.

Take off locking clip for shaft pin of brake pedal.

Push out shaft pin.

Installation:


Grease sliding surfaces,
refer to Technical Data.

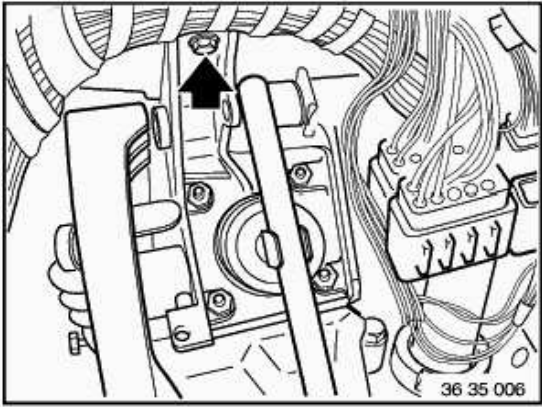

Unscrew screw.

Installation:

Tightening torque, 35 11 1AZD.

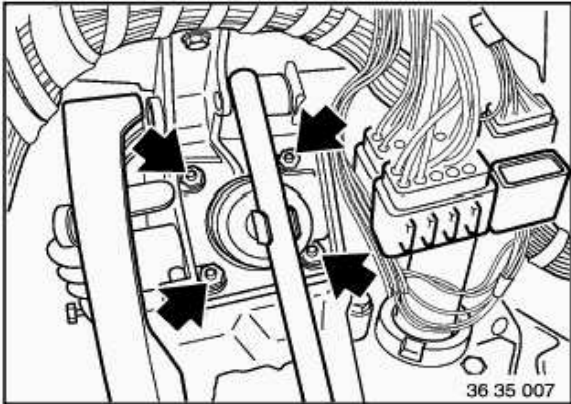

Unscrew self-locking nuts.

Remove mounting block.

Installation:

Replace self-locking nuts.

Tightening torque, 35 11 1AZD.