


Remove complete instrument carrier,
refer to 62 21 000.

Turn bulb holder of faulty instrument lighting with special tool
61 1 138 in direction of arrow and remove. Pull bulb out of
holder.

Installation:

Make sure bulb brightness is correct.

Bulb chamber could melt in event of excessive bulb power.

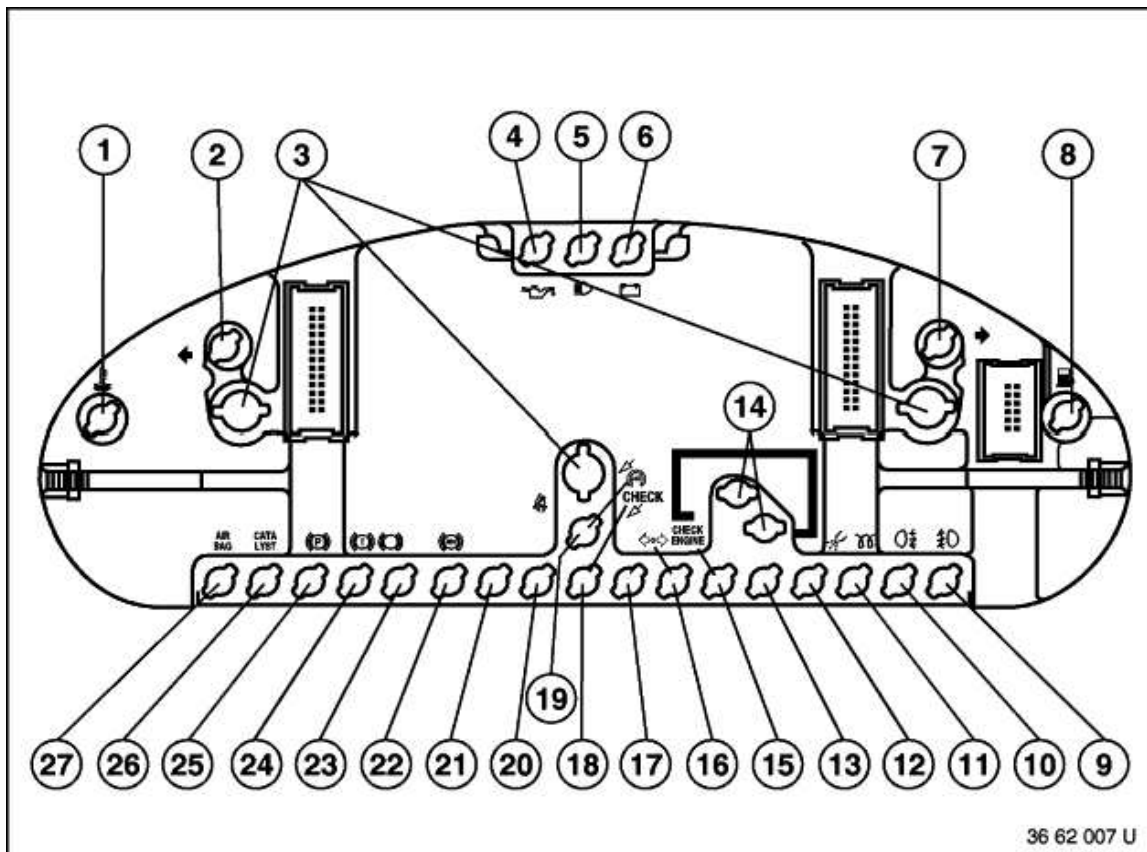

- 1 Excess temperature warning lamp
- 2 Right turn signal
- 3 Lighting for instruments
- 4 Oil pressure
- 5 High beam
- 6 Charge control
- 7 Left turn signal
- 8 Fuel reserve
- 9 Front fog lamp

- 10 Rear fog lights
- 11 Diesel preheating
- 12 Diesel diagnosis
- 13 Not used
- 14 Light for LCD display

- 15 Engine control
- 16 Trailer turn indicator
- 17 EGS failure
- 18 Check
- 19 Wheel-Slip Control (ASC)
- 20 Seat belt
- 21 Not used
- 22 ABS control
- 23 Brake-pad wear indicator
- 24 Brake fluid
- 25 Handbrake
- 26 Catalytic-converter overtemperature
- 27 Airbag