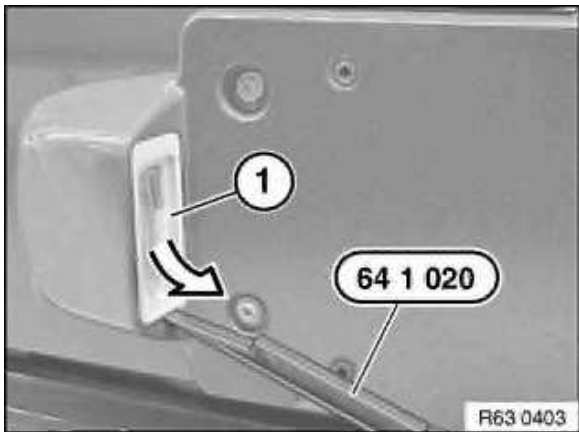
**One-part license plate light:**

Press license plate light (1) towards rear and lever out in direction of arrow.

Disconnect plug connection underneath and remove license plate light (1).

**Two-part license plate light:**

Lever out license plate light (1) with special tool 64 1 020 in direction of arrow.

Disconnect plug connection underneath and remove license plate light (1).