




Lever out side-marker lights at front with special tool 00 9 322 (plastic wedge).

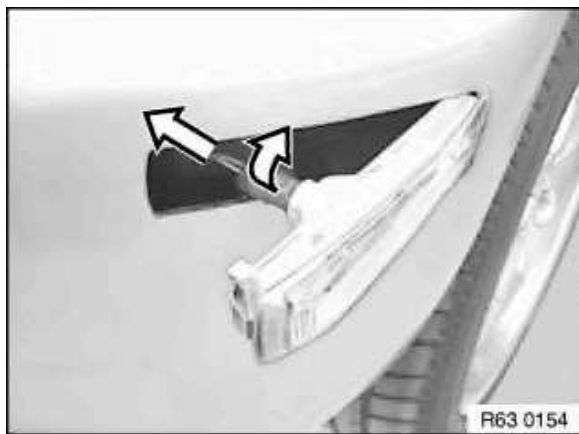

Turn lamp socket by approx. 90 ° and pull out.