

Releasing and removing oddments tray:

If necessary, remove radio receiver,
refer to 65 11 030.

Version with manual transmission:

Remove shift lever knob with cover and sound insulation,
refer to 25 11 000.


Version with automatic transmission:


Remove handle with cover and sound insulation,
refer to 25 16 050.

Unfasten screws on left/right side.




Lift out rubber gaiter (1).

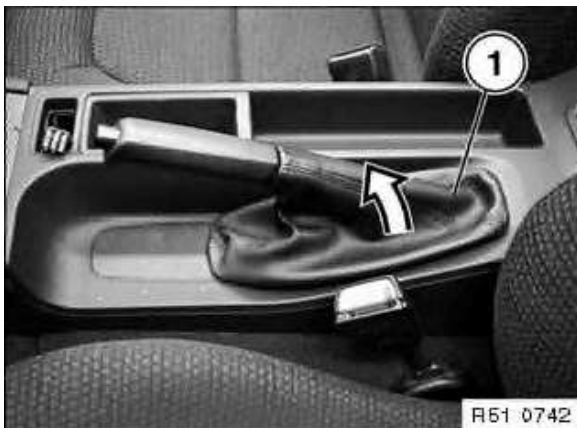


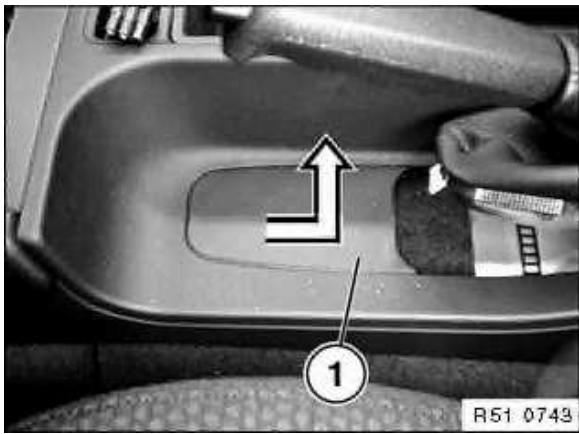


Pull finisher strip (1) approx. 5 mm backwards and remove upwards.

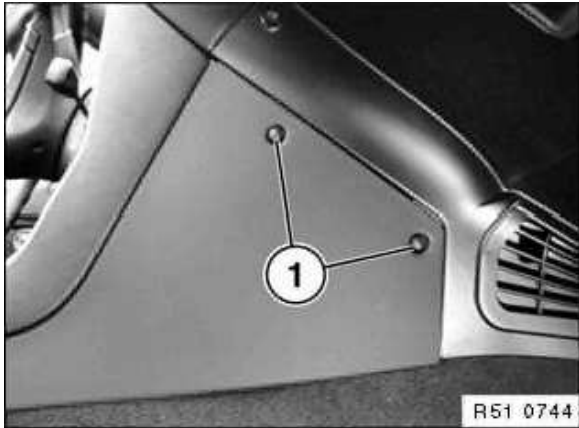

Lift off finisher strips (1) and unfasten left/right screws.

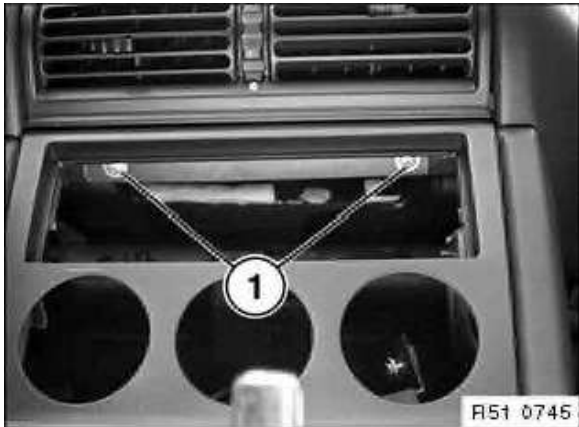

Unfasten screws (1).

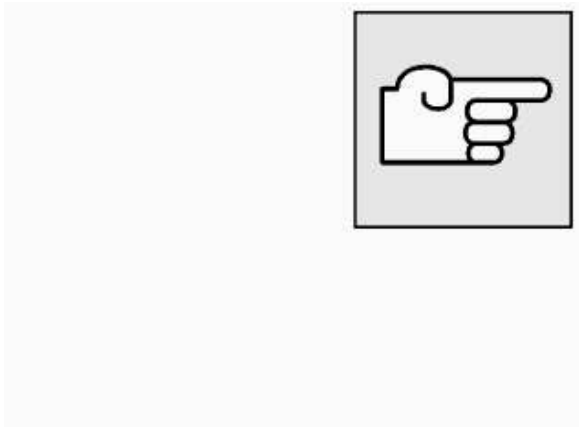

Note:

The operation "Unfastening oddments tray" ends here.

Removing oddments tray:

Remove all switches from oddments tray,
refer to 61 31 ...

Remove clock,
refer to 62 13 050.


M Roadster only:

Remove outside temperature gauge,
refer to 62 13 061.

Remove oil temperature gauge,
refer to 62 13 070.

Unfasten left/right screws.

Unclip heater controls and slide inwards.

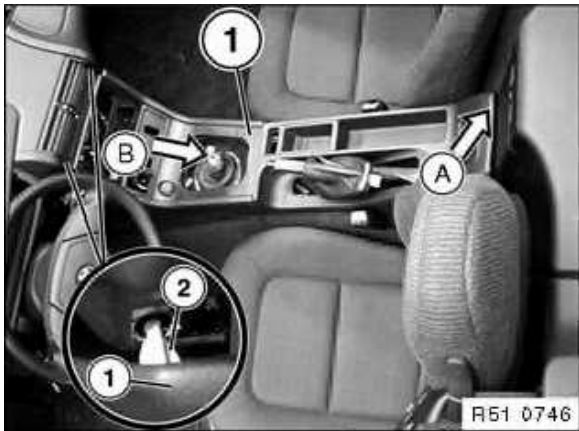


Lift oddments tray (1) at rear (A) a little and at same time pull towards rear (B) a little until guides (2) at front are fed out.

Disconnect plug connection and light for cigarette lighter.

Z3 Roadster from 04/99:

Disconnect plug connection for clock/on-board computer.

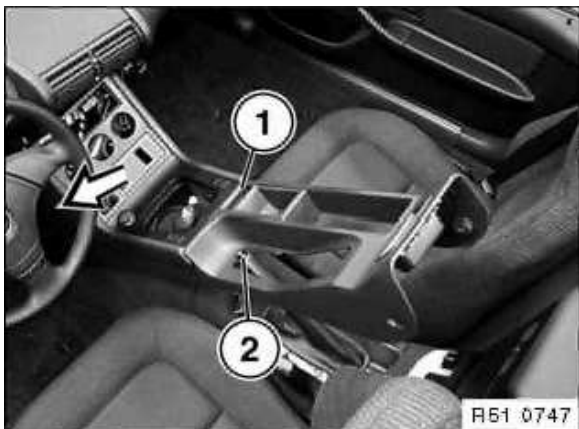

Push oddments tray (1) forwards at an angle and guide out of parking brake lever (2).

Remove oddments tray (1) from vehicle.